



TRANSCCELL TECHNOLOGY, INC.

# ***TC-2005 Series***

## ***Digital Counting Scale – Dual Channel***

### **Setup & Operation Manual**

Revision 2.9  
October 10, 2003

© 2001-2003 Transcell Technology, Inc.

Contents subject to change without notice.

Transcell Technology, Inc.  
975 Deerfield Parkway  
Buffalo Grove, IL 60089  
Tel (847) 419-9180  
Fax (847) 419-1515  
E-mail: [transcell@transcell.net](mailto:transcell@transcell.net)  
Web: [www.transcell.net](http://www.transcell.net)

# TABLE OF CONTENTS

	<u>Page</u>
Chapter 1: Introduction to the Transcell TC-2005 Series Digital Counting Scale.....	6
Chapter 2: Getting Started .....	7
Chapter 3: Operation.....	9
3.1 Display.....	9
3.1.1 Light Emitting Diode (LED).....	10
3.2 Keyboard .....	11
3.2.1 Function Keys.....	11
3.2.2 Function/Numeric Keys .....	11
3.3 General Scale Operation.....	11
3.3.1 Weighing an Item .....	12
3.3.2 Weighing an Item On The Remote Scale .....	12
3.3.3 Taring an Item of Unknown Weight.....	12
3.3.4 Taring an Item of Known Weight.....	12
3.3.5 Clearing a Tare.....	12
3.3.6 Piece Counting.....	12
3.3.7 Clearing the Piece Count .....	13
Chapter 4: Advanced Features and Operation .....	14
4.1 Average Piece Weight Entry .....	14
4.1.1 APW Entry from Scale Keyboard .....	14
4.1.2 Download APW from TC Scale .....	14
4.1.3 APW Entry from Scanner .....	14
4.2 Memory Accumulator .....	15
4.2.1 Accessing the Memory Accumulator.....	15
4.2.2 Adding to the Memory Accumulator .....	15
4.2.3 Printing the Memory Accumulator .....	15
4.2.4 Clearing and Exiting the Memory Accumulator.....	15
4.3 Charging the Battery .....	15
Chapter 5: Configuration .....	16
5.1 Configuration Overview.....	16
5.2 Setup ("F") Menu .....	17
5.3 Remote ("R") Menu .....	18
5.3.1 Entering the Remote Menu .....	18
5.3.2 Navigating in the Remote Menu.....	19
5.3.3 Exiting the Remote Menu .....	19
5.4 User ("A") Menu.....	20

5.4.1	Entering the User Menu .....	20
5.4.2	Navigating in the User Menu.....	20
5.4.3	Exiting the User Menu.....	23
5.5	User Menu Procedures .....	24
5.5.1	Custom Unit Entry (A6) .....	24
5.5.2	ID Number Entry (A7).....	24
5.5.3	Set Time (A8) .....	25
5.5.4	Check Time (A9) .....	25
5.5.5	Set Date (A10).....	25
5.5.6	Check Date (A11).....	25
Chapter 6:	Calibration .....	26
6.1	Calibration Overview .....	26
6.2	Calibration Mode .....	26
6.3	Calibration Mode - Remote Scale .....	27
Appendix A:	Specifications .....	28
Appendix B:	Serial Port Information.....	29
B.1	COM1 Serial Port .....	29
B.1.1	Connecting the Serial Device.....	29
B.1.2	Default Print Format .....	29
B.2	COM2 Serial Port .....	30
B.2.1	Connecting the Serial Device.....	30
B.2.2	Full Duplex Modes for COM2.....	30
B.2.2.1	Continuous Mode.....	30
Appendix C:	Error Messages .....	32
C.1	Error Messages .....	32
C.1.1	Operator Errors .....	32
C.1.2	Calibration Errors .....	32
Appendix D:	Remote Scale Wiring .....	33
D.1	Remote Scale Wiring .....	33

## LIST OF FIGURES

1-1	TC-2005 Series Front Panel .....	6
2-1	TC-2005 Rear Panel .....	7
3-1	TC-2005 Display Detail .....	9
3-2	Function Keys Layout .....	10
3-3	Function/Numeric Keys Layout .....	10
5-0	F Menu .....	16
5-1	Remote Menu Key Assignments .....	18
5-2	Remote Menu Chart .....	19
5-3	User Menu Key Assignments .....	19
5-4	User Menu Chart .....	20
6-1	Calibration Mode Key Assignments .....	26
B-1	Pin Assignments for COM1 Serial Port .....	29
B-2	Default Print Format .....	29
B-3	Pin Assignments for COM2 Serial Port .....	30
B-4	Consolidated Controls Demand Mode .....	30
D-1	Color Codes for Shielded Load Cell Cable .....	33
D-2	Pin assignments for the Load Cell Port .....	33

## LIST OF TABLES

1-1	TC-2005 Series Product Matrix .....	6
3-1	TC-2005 Series Annunciator Definitions .....	9
3-1a	TC-2005 Series Annunciator Definitions - Continued .....	10
5-0	F Menu .....	17
5-1	Remote Menu Descriptions .....	19
5-2	User Menu Descriptions – A1 to A10 .....	21
5-2a	User Menu Descriptions – A11 to A16 .....	21
6-1	Minimum / Recommended Calibration Test Weights .....	27
B-1	Recognized Host Commands .....	31

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/transcell/TC-2005 Series setup and operation ma](https://the-checkout-tech.com/manuals/transcell/TC-2005%20Series%20setup%20and%20operation%20manual.pdf)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://the-checkout-tech.com)