



TRANSCCELL TECHNOLOGY, INC.

TI-600E-SS

Digital Indicator

Setup / Operation Manual

Revision 1.3
September 9, 2002

© 1997-2002 Transcell Technology, Inc.

Contents subject to change without notice.

Transcell Technology, Inc.
975 Deerfield Parkway
Buffalo Grove, IL 60089
Tel (847) 419-9180
Fax (847) 419-1515
E-mail: transcell@transcell.net
Web: www.transcell.net

TABLE OF CONTENTS

	<u>Page</u>
Chapter 1: Introduction To The TI-600E-SS Indicator	1-1
Chapter 2: Installation	2-1
2.1 Stainless Steel Enclosure (TI-600E-SS)	2-1
2.1.1 Connecting the weigh platform.....	2-1
2.1.2 Connecting the serial printer, remote display or computer	2-2
2.1.3 Connecting the power supply.....	2-2
Chapter 3: Configuration	3-1
3.1 Configuration Overview.....	3-1
3.2 Setup ("F") Menu.....	3-1
3.2.1 Entering the Setup Menu	3-1
3.2.2 Navigating in the Setup Menu.....	3-1
3.2.3 Notes on the Setup Menu	3-2
3.2.4 Exiting the Setup Menu	3-2
3.3 User ("A") Menu.....	3-3
3.3.1 Entering the User Menu	3-3
3.3.2 Navigating in the User Menu.....	3-3
3.3.3 Notes on the User Menu	3-4
3.3.4 Exiting the User Menu	3-4
Chapter 4: Setup Menu Descriptions and Procedures	4-1
4.1 Setup Menu Descriptions	4-1
4.2 Setup Menu Procedures	4-3
Chapter 5: User Menu Descriptions and Procedures	5-1
5.1 User Menu Descriptions.....	5-1
5.2 User Menu Procedures	5-2
5.2.1 ID Number Entry (A8).....	5-2
5.2.2 Line Feeds Entry (A9)	5-2
Chapter 6: Calibration	6-1
6.1 Calibration Overview	6-1
6.2 Zero Calibration (F16).....	6-1
6.3 Span Calibration (F17).....	6-1
6.4 View Calibration Values (F18).....	6-2
6.5 Key-in Zero Calibration Value (F19)	6-2
6.6 Key-in Span Calibration Value (F20)	6-3

Chapter 7:	Operation.....	7-1
7.1	Display.....	7-1
7.1.1	Light Emitting Diode (LED) Display.....	7-1
7.2	Keyboard.....	7-2
7.2.1	Function Keys.....	7-2
7.3	General Scale Operation.....	7-2
7.3.1	Weighing an item.....	7-2
7.3.2	Taring an item of unknown weight.....	7-3
7.3.3	Taring an item of known weight.....	7-3
7.3.4	Clearing the tare weight value.....	7-3
Chapter 8:	Legal for Trade Sealing.....	8-1
8.1	Stainless Steel Enclosure.....	8-1
Appendix A:	Specifications.....	A-1
Appendix B:	Serial Port Information.....	B-1
B.1	Serial Port Modes.....	B-1
B.1.1	Full Duplex Mode.....	B-1
B.1.1.1	Recognized Host Commands.....	B-2
B.1.2	Print Ticket Mode.....	B-2
B.1.3	Simplex Mode.....	B-3
Appendix C:	Determining Proper Span Gain (F2).....	C-1
C.1	Span Gain Overview.....	C-1
C.2	Setting the initial value for span gain.....	C-1
C.3	Viewing the internal counts.....	C-1
Appendix D:	Displayed Error Codes.....	D-1

LIST OF FIGURES

1-1	TI-600E-SS Front Panel.....	1-1
2-1	TI-600E-SS Main Circuit Board Overview	2-1
2-2	Connection Assignments for the Load Cell Terminal (J8)	2-1
2-3	Connection Assignments for the serial communication Terminal.....	2-2
3-1	Setup Menu Key Assignments.....	3-2
3-2	Setup Menu Chart.....	3-2
3-3	User Menu Key Assignments.....	3-3
3-4	User Menu Chart.....	3-4
7-1	TI-600E-SS LED Display Detail	7-1
7-2	Function Keys Layout	7-2
B-1	Cable Diagram for Indicator to IBM PC	B-1
B-2	Consolidated Controls Demand Mode.....	B-1
B-3	Print Ticket	B-2
B-4	Cable Diagram for Indicator to Printer	B-2
B-5	Consolidated Controls Continuous Mode	B-3

LIST OF TABLES

4-1	Invalid Setup Selections for commercial applications.....	4-3
6-1	Calibration Value Table.....	6-2
7-1	TI-600E-SS Annunciator Definitions	7-1
C-1	Minimum Recommended Span Gain Table.....	C-2

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/transcell/TI-600E-SS setup and operation manual](https://the-checkout-tech.com/manuals/transcell/TI-600E-SS%20setup%20and%20operation%20manual.pdf)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)