

MAINTENANCE MANUAL

1708S SERIES WEIGHING INDICATOR

**MODELS: 1708S-50K , 1708S-100K , 1708S-150K
1708S-300K , 1708S-500K, 1708S-1000K
1708S-2000K, 1708S-3000K**

CONTENTS

1. INTRODUCTION

2. SPECIFICATIONS

2.1 SYSTEM BLOCK DIAGRAM

2.2 PHYSICAL LAYOUT OF ELECTRICAL CONNECTION

2.3 GENERAL SPECIFICATIONS

3. INITIAL SETUP

3.1 INTERNAL FUNCTION AND SETTING METHODS

3.2 AUTO AND DEALER CALIBRATION PROCEDURES

3.3 DISABLE CALIBRATION WITH DIP SW. (S1)

3.4 OFFSET AND SPAN VALUE DATA

3.5 FLOW CHART

4. TROUBLE SHOOTING

4.1 TROUBLE SHOOTING LOOP

4.2 PARTS AND COMPONENTS TROUBLE SHOOTING

5. ELECTRICAL CIRCUITRY

5.1 SCHEMATICS

5.2 PCB LAYOUT

6. BILL OF MATERIAL

7. APPENDIX

APR 2002 REV 1

Specifications and Function Subject to Change without Notice

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/UWE/1708S service manual.html](https://the-checkout-tech.com/manuals/UWE/1708S%20service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)