

## **MAINTENANCE MANUAL**

### **1708S SERIES WEIGHING INDICATOR**

**MODELS: 1708S-50K , 1708S-100K , 1708S-150K  
1708S-300K , 1708S-500K, 1708S-1000K  
1708S-2000K, 1708S-3000K**

#### **CONTENTS**

##### **1. INTRODUCTION**

##### **2. SPECIFICATIONS**

2.1 SYSTEM BLOCK DIAGRAM

2.2 PHYSICAL LAYOUT OF ELECTRICAL CONNECTION

2.3 GENERAL SPECIFICATIONS

##### **3. INITIAL SETUP**

3.1 INTERNAL FUNCTION AND SETTING METHODS

3.2 AUTO AND DEALER CALIBRATION PROCEDURES

3.3 DISABLE CALIBRATION WITH DIP SW. (S1)

3.4 OFFSET AND SPAN VALUE DATA

3.5 FLOW CHART

##### **4. TROUBLE SHOOTING**

4.1 TROUBLE SHOOTING LOOP

4.2 PARTS AND COMPONENTS TROUBLE SHOOTING

##### **5. ELECTRICAL CIRCUITRY**

5.1 SCHEMATICS

5.2 PCB LAYOUT

##### **6. BILL OF MATERIAL**

##### **7. APPENDIX**

APR 2002 REV 1

*Specifications and Function Subject to Change without Notice*

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*