

MAINTENANCE MANUAL

AM WEIGHING SCALE SERIES

MODELS: AM-3000, AM-6000, AM-15K, AM-30K

CONTENTS

- 1. INTRODUCTION**
- 2. SPECIFICATIONS**
 - 2.1 SYSTEM BLOCK DIAGRAM
 - 2.2 PHYSICAL LAYOUT OF ELECTRICAL CONNECTION
 - 2.3 GENERAL SPECIFICATIONS
- 3. INITIAL SETUP**
 - 3.1 INTERNAL FUNCTION AND SETTING METHODS
 - 3.2 AUTO AND DEALER CALIBRATION PROCEDURES
 - 3.3 DISABLE CALIBRATION WITH DIP SW.(S1)
 - 3.4 OFFSET AND SPAN VALUE DATA
 - 3.5 FLOW CHART
- 4. TROUBLE SHOOTING**
 - 4.1 TROUBLE SHOOTING LOOP
 - 4.2 PARTS AND COMPONENTS TROUBLE SHOOTING
- 5. ELECTRICAL CIRCUITRY**
 - 5.1 SCHEMATICS
 - 5.2 PCB LAYOUT
- 6. BILL OF MATERIAL**
- 7. APPENDIX**

DECEMBER 1999 REV 1

Specifications and Function Subject to Change without Notice

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/UWE/AM-3000 AM-6000 AM-15K AM-30K service](https://the-checkout-tech.com/manuals/UWE/AM-3000%20AM-6000%20AM-15K%20AM-30K%20service%20manuals)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)