

MAINTENANCE MANUAL

APM DIGITAL WEIGHING BENCH SCALE NTEP APPROVED VERSION

CONTENTS

1. INTRODUCTION

2. SPECIFICATIONS

- 2.1 SYSTEM BLOCK DIAGRAM
- 2.2 PHYSICAL LAYOUT OF ELECTRICAL CONNECTION
- 2.3 GENERAL SPECIFICATIONS

3. INITIAL SETUP

- 3.1 INTERNAL FUNCTION AND SETTING METHODS
- 3.2 CALIBRATION
- 3.3 DISABLE CALIBRATION AND INTERNAL FUNCTIONS SETTING WITH JUMPER
- 3.4 OFFSET AND SPAN VALUE DATA
- 3.5 FLOW CHART

4. TROUBLE SHOOTING

- 4.1 TROUBLE SHOOTING LOOP
- 4.2 PARTS AND COMPONENTS TROUBLE SHOOTING

5. ELECTRICAL CIRCUITRY

- 5.1 SCHEMATICS
- 5.2 PCB LAYOUT

6. BILL OF MATERIAL

7. APPENDIX

AUGUST 2002 REV 4

Specifications and Function Subject to Change without Notice

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/UWE/APM NTEP service manual.html>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)