

MAINTENANCE MANUAL

FM/BM SERIES

MODELS: FM-60 FM-150 FM-300
BM-30 BM-60 BM-150

CONTENTS

1	INTRODUCTION	1
2	SPECIFICATION	2
	1. SYSTEM BLOCK DIAGRAM	
	2. PHYSICAL LAYOUT OF ELECTRICAL CONNECTION	
	3. GENERAL SPECIFICATION	
3	INITIAL SETUP	8
	1. INTERNAL FUNCTIONS AND ALTERNATE DIVISION	
	2. AUTO AND DEALER CALIBRATION	
	3. DISABLE CALIBRATION WITH DIP SW.(S1)	
	4. OFFSET AND SPAN VALUE DATA	
	5. FLOW CHART	
4	TROUBLE SHOOTING	17
	1. TROUBLE SHOOTING LOOP	
	2. PARTS AND COMPONENTS TROUBLE SHOOTING	
5	ELECTRICAL CIRCUITRY	22
	1. SCHEMATICS	
	2. PCB LAYOUT	
6	PARTS LIST	29
7	APPENDIX	34

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/UWE/BM FM service manual.html>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)