

# **MAINTENANCE MANUAL**

## **FM/BM SERIES**

**MODELS: FM-60    FM-150    FM-300**  
**BM-30    BM-60    BM-150**

### **CONTENTS**

---

<b>1</b>	<b>INTRODUCTION</b>	<b>1</b>
<b>2</b>	<b>SPECIFICATION</b>	<b>2</b>
	<b>1. SYSTEM BLOCK DIAGRAM</b>	
	<b>2. PHYSICAL LAYOUT OF ELECTRICAL CONNECTION</b>	
	<b>3. GENERAL SPECIFICATION</b>	
<b>3</b>	<b>INITIAL SETUP</b>	<b>8</b>
	<b>1. INTERNAL FUNCTIONS AND ALTERNATE DIVISION</b>	
	<b>2. AUTO AND DEALER CALIBRATION</b>	
	<b>3. DISABLE CALIBRATION WITH DIP SW.(S1)</b>	
	<b>4. OFFSET AND SPAN VALUE DATA</b>	
	<b>5. FLOW CHART</b>	
<b>4</b>	<b>TROUBLE SHOOTING</b>	<b>17</b>
	<b>1. TROUBLE SHOOTING LOOP</b>	
	<b>2. PARTS AND COMPONENTS TROUBLE SHOOTING</b>	
<b>5</b>	<b>ELECTRICAL CIRCUITRY</b>	<b>22</b>
	<b>1. SCHEMATICS</b>	
	<b>2. PCB LAYOUT</b>	
<b>6</b>	<b>PARTS LIST</b>	<b>29</b>
<b>7</b>	<b>APPENDIX</b>	<b>34</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*