

MAINTENANCE MANUAL

DW SERIES

MODELS: DW-3000E, DW-6000E, DW-15KE, and DW-30KE

CONTENTS

1. INTRODUCTION

2. SPECIFICATIONS

2.1 SYSTEM BLOCK DIAGRAM

2.2 PHYSICAL LAYOUT OF ELECTRICAL CONNECTION

2.3 GENERAL SPECIFICATIONS

3. INITIAL SETUP

3.1 INTERNAL FUNCTION AND SETTING METHODS

3.2 AUTO AND DEALER CALIBRATION PROCEDURES

3.3 DISABLE CALIBRATION WITH DIP SW. (S1)

3.4 OFFSET AND SPAN VALUE DATA

3.5 FLOW CHART

4. TROUBLE SHOOTING

4.1 TROUBLE SHOOTING LOOP

4.2 PARTS AND COMPONENTS TROUBLE SHOOTING

5. ELECTRICAL CIRCUITRY

5.1 SCHEMATICS

5.2 PCB LAYOUT

6. BILL OF MATERIAL

7. APPENDIX

MAY 2001 REV 1

Specifications and Function Subject to Change without Notice

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/UWE/DW-3000E DW-6000E DW-15KE DW-30K>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)