

MAINTENANCE MANUAL

DW SERIES

MODELS: DW-3000E, DW-6000E, DW-15KE, and DW-30KE

CONTENTS

1. INTRODUCTION

2. SPECIFICATIONS

2.1 SYSTEM BLOCK DIAGRAM

2.2 PHYSICAL LAYOUT OF ELECTRICAL CONNECTION

2.3 GENERAL SPECIFICATIONS

3. INITIAL SETUP

3.1 INTERNAL FUNCTION AND SETTING METHODS

3.2 AUTO AND DEALER CALIBRATION PROCEDURES

3.3 DISABLE CALIBRATION WITH DIP SW. (S1)

3.4 OFFSET AND SPAN VALUE DATA

3.5 FLOW CHART

4. TROUBLE SHOOTING

4.1 TROUBLE SHOOTING LOOP

4.2 PARTS AND COMPONENTS TROUBLE SHOOTING

5. ELECTRICAL CIRCUITRY

5.1 SCHEMATICS

5.2 PCB LAYOUT

6. BILL OF MATERIAL

7. APPENDIX

MAY 2001 REV 1

Specifications and Function Subject to Change without Notice

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*