

# MAINTENANCE MANUAL

## FS SERIES

**MODELS: FS-60  
FS-150  
FS-300**

<b>CONTENTS</b>	<b>PAGE NO.</b>
<b>1 INTRODUCTION.....</b>	<b>1</b>
<b>2 SPECIFICATION.....</b>	<b>2</b>
<b>1. SYSTEM BLOCK DIAGRAM</b>	
<b>2. PHYSICAL LAYOUT OF ELECTRICAL CONNECTION</b>	
<b>3. GENERAL SPECIFICATION</b>	
<b>3 INITIAL SETUP.....</b>	<b>6</b>
<b>1. INTERNAL FUNCTIONS AND ALTERNATE DIVISION</b>	
<b>2. AUTO AND DEALER CALIBRATION</b>	
<b>3. DISABLE CALIBRATION WITH DIP SW.(S1)</b>	
<b>4. OFFSET AND SPAN VALUE DATA</b>	
<b>5. FLOW CHART</b>	
<b>4 TROUBLE SHOOTING.....</b>	<b>14</b>
<b>1. TROUBLE SHOOTING LOOP</b>	
<b>2. PARTS AND COMPONENTS TROUBLE SHOOTING</b>	
<b>5 ELECTRICAL CIRCUITRY.....</b>	<b>19</b>
<b>1. SCHEMATICS</b>	
<b>2. PCB LAYOUT</b>	
<b>6 PARTS LIST.....</b>	<b>26</b>
<b>7 APPENDIX.....</b>	<b>30</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/UWE/FS-60 FS-150 FS-300 service manual.html>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)