

MAINTENANCE MANUAL

GM,EBW,HBW,HFW SERIES

**MODELS: GM-3000 GM-6000 GM-15K GM-30K
GM-1100 GM-11K**

EBW-60K EBW-120K

HBW-30K HBW-60K HBW-150K

HFW-60K HFW-150K HFW-300K

CONTENTS:

1 INTRODUCTION	1
2 BLOCK DIAGRAM	13
3 POWER SUPPLY SECTION	14
4 TROUBLE SHOOTING	16
5 FLOW CHART I (Calibration for end-user)	19
6 FLOW CHART II (Calibration for technicians)	20
F1. Dealer Calibration	
F2. Display / Segment Check	
F3. Offset Value	
F4. Automatic Shut-off function	
7 PARTS LIST	26
8 SCHEMATICS	41
9 COMPONENTS LAYOUT	49
10 PCB LAYOUT	54
APPENDIX A	
APPENDIX B	
APPENDIX C	
APPENDIX D	

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*