MAINTENANCE MANUAL
GS SERIES
MODELS: GS-1200 GS-1500 GS-3000 GS-6000 GS-12K GS-15K
CONTENTS
 INTRODUCTION 1 SPECIFICATION 2 SYSTEM BLOCK DIAGRAM PHYSICAL LAYOUT OF ELECTRICAL CONNECTION GENERAL SPECIFICATION INITIAL SETUP 7 INTERNAL FUNCTIONS AND ALTERNATE DIVISION AUTO AND DEALER CALIBRATION DISABLE CALIBRATION WITH DIP SW.(S1) OFFSET AND SPAN VALUE DATA FLOW CHART
4 TROUBLE SHOOTING 14 1. TROUBLE SHOOTING LOOP 2. PARTS AND COMPONENTS TROUBLE SHOOTING
5 ELECTRICAL CIRCUITRY 19 1. SCHEMATICS 2. PCB LAYOUT 6 PARTS LIST 25 7 APPENDIX 29

Specifications and functions subject to change without prior notice

This is a "Table of Contents preview" for quality assurance

The full manual can be purchased from our store: https://the-checkout-tech.com/manuals/UWE/GS service manual.html

And our free Online Keysheet maker: https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/

HTTPS://THE-CHECKOUT-TECH.COM