

# **MAINTENANCE MANUAL**

## **HS SERIES**

**MODELS: HS-3000 HS-7500 HS-15K  
HS-30K**

### **CONTENTS**

---

- 1 INTRODUCTION 1**
- 2 SPECIFICATION 2**
  - 1. SYSTEM BLOCK DIAGRAM**
  - 2. PHYSICAL LAYOUT OF ELECTRICAL CONNECTION**
  - 3. GENERAL SPECIFICATION**
- 3 INITIAL SETUP 6**
  - 1. INTERNAL FUNCTIONS AND ALTERNATE DIVISION**
  - 2. AUTO AND DEALER CALIBRATION**
  - 3. DISABLE CALIBRATION WITH DIP SW.(S1)**
  - 4. OFFSET AND SPAN VALUE DATA**
  - 5. FLOW CHART**
- 4 TROUBLE SHOOTING 13**
  - 1. TROUBLE SHOOTING LOOP**
  - 2. PARTS AND COMPONENTS TROUBLE SHOOTING**
- 5 ELECTRICAL CIRCUITRY 17**
  - 1. SCHEMATICS**
  - 2. PCB LAYOUT**
- 6 PARTS LIST 22**
- 7 APPENDIX 25**

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/UWE/HS-3000 HS-7500 HS-15K HS-30K service](https://the-checkout-tech.com/manuals/UWE/HS-3000%20HS-7500%20HS-15K%20HS-30K%20service%20manuals)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)