

MAINTENANCE MANUAL

HS SERIES

**MODELS: HS-6 HS-15 HS-30
HS-60**

CONTENTS

- 1 INTRODUCTION 1**
- 2 SPECIFICATION 2**
 - 1. SYSTEM BLOCK DIAGRAM**
 - 2. PHYSICAL LAYOUT OF ELECTRICAL CONNECTION**
 - 3. GENERAL SPECIFICATION**
- 3 INITIAL SETUP 6**
 - 1. INTERNAL FUNCTIONS AND ALTERNATE DIVISION**
 - 2. AUTO AND DEALER CALIBRATION**
 - 3. DISABLE CALIBRATION WITH DIP SW.(S1)**
 - 4. OFFSET AND SPAN VALUE DATA**
 - 5. FLOW CHART**
- 4 TROUBLE SHOOTING 13**
 - 1. TROUBLE SHOOTING LOOP**
 - 2. PARTS AND COMPONENTS TROUBLE SHOOTING**
- 5 ELECTRICAL CIRCUITRY 17**
 - 1. SCHEMATICS**
 - 2. PCB LAYOUT**
- 6 PARTS LIST 22**
- 7 APPENDIX 25**

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/UWE/HS-6 HS-15 HS-30 HS-60 NTEP service m>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)