

## **MAINTENANCE MANUAL**

### **MII/SK SERIES**

**MODELS:** MII-600, 1200, 3000, 6000 (1/6000)  
MII-2500, 5000 (1/2500)  
SK-600, 1200, 3000, 6000 (1/6000)  
SK-600, 1500, 3000, 6000 (1/3000)

### **CONTENTS**

- 1. INTRODUCTION**
- 2. SPECIFICATIONS**
  - 2.1 SYSTEM BLOCK DIAGRAM
  - 2.2 PHYSICAL LAYOUT OF ELECTRICAL CONNECTION
  - 2.3 GENERAL SPECIFICATIONS
- 3. INITIAL SETUP**
  - 3.1 INTERNAL FUNCTION AND SETTING METHODS
  - 3.2 AUTO AND DEALER CALIBRATION PROCEDURES
  - 3.3 DISABLE CALIBRATION WITH DIP SW. (S1)
  - 3.4 OFFSET AND SPAN VALUE DATA
  - 3.5 FLOW CHART
- 4. TROUBLE SHOOTING**
  - 4.1 TROUBLE SHOOTING LOOP
  - 4.2 PARTS AND COMPONENTS TROUBLE SHOOTING
- 5. ELECTRICAL CIRCUITRY**
  - 5.1 SCHEMATICS
  - 5.2 PCB LAYOUT
- 6. BILL OF MATERIAL**

OCT 2005

*Specifications and Function Subject to Change without Notice*

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/UWE/MII SK service manual.html>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)