

MAINTENANCE MANUAL

MII/SK SERIES

MODELS: MII-600, 1200, 3000, 6000 (1/6000)
MII-2500, 5000 (1/2500)
SK-600, 1200, 3000, 6000 (1/6000)
SK-600, 1500, 3000, 6000 (1/3000)

CONTENTS

- 1. INTRODUCTION**
- 2. SPECIFICATIONS**
 - 2.1 SYSTEM BLOCK DIAGRAM
 - 2.2 PHYSICAL LAYOUT OF ELECTRICAL CONNECTION
 - 2.3 GENERAL SPECIFICATIONS
- 3. INITIAL SETUP**
 - 3.1 INTERNAL FUNCTION AND SETTING METHODS
 - 3.2 AUTO AND DEALER CALIBRATION PROCEDURES
 - 3.3 DISABLE CALIBRATION WITH DIP SW. (S1)
 - 3.4 OFFSET AND SPAN VALUE DATA
 - 3.5 FLOW CHART
- 4. TROUBLE SHOOTING**
 - 4.1 TROUBLE SHOOTING LOOP
 - 4.2 PARTS AND COMPONENTS TROUBLE SHOOTING
- 5. ELECTRICAL CIRCUITRY**
 - 5.1 SCHEMATICS
 - 5.2 PCB LAYOUT
- 6. BILL OF MATERIAL**

OCT 2005

Specifications and Function Subject to Change without Notice

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*