MAINTENANCE MANUAL NJW SERIES

MODELS: NJW-150 NJW-300 NJW-600 NJW-1500 NJW-3000

CONTENTS

- 1 INTRODUCTION 1
- 2 SPECIFICATION 2
 - 1. SYSTEM BLOCK DIAGRAM
 - 2. PHYSICAL LAYOUT OF ELECTRICAL CONNECTION
 - 3. GENERAL SPECIFICATION
- 3 INITIAL SETUP 6
 - 1. INTERNAL FUNCTIONS AND SETTING METHODS
 - 2. AUTO AND DEALER CALIBRATION PROCEDURES
 - 3. DISABLE CALIBRATION WITH DIP SW.(S1)
 - 4. OFFSET AND SPAN VALUE DATA
 - 5. FLOW CHART
- 4 TROUBLE SHOOTING 15
 - 1. TROUBLE SHOOTING LOOP
 - 2. PARTS AND COMPONENTS TROUBLE SHOOTING
- 5 ELECTRICAL CIRCUITRY 19
 - 1. SCHEMATICS
 - 2. PCB LAYOUT
- 6 PARTS LIST 26
- 7 APPENDIX 31

This is a "Table of Contents preview" for quality assurance

The full manual can be found at http://the-checkout-tech.com/estore/catalog/

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<u>http://the-checkout-tech.com</u>: the biggest supplier of cash register and scale manuals on the net