

# **MAINTENANCE MANUAL**

## **OEC/OAC SERIES**

**MODELS:** OEC-1.2 OEC-3 OEC-6 OEC-12 OEC-30  
OAC-1.2 OAC-2.4 OAC-6 OAC-12 OAC-24

### **CONTENTS**

---

<b>1</b>	<b>INTRODUCTION</b>	<b>1</b>
<b>2</b>	<b>SPECIFICATION</b>	<b>2</b>
	1. SYSTEM BLOCK DIAGRAM	
	2. PHYSICAL LAYOUT OF ELECTRICAL CONNECTION	
	3. GENERAL SPECIFICATION	
<b>3</b>	<b>INITIAL SETUP</b>	<b>7</b>
	1. INTERNAL FUNCTIONS AND ALTERNATE DIVISION	
	2. AUTO AND DEALER CALIBRATION	
	3. DISABLE CALIBRATION WITH DIP SW.(S1)	
	4. OFFSET AND SPAN VALUE DATA	
	5. FLOW CHART	
<b>4</b>	<b>TROUBLE SHOOTING</b>	<b>16</b>
	1. TROUBLE SHOOTING LOOP	
	2. PARTS AND COMPONENTS TROUBLE SHOOTING	
<b>5</b>	<b>ELECTRICAL CIRCUITRY</b>	<b>20</b>
	1. SCHEMATICS	
	2. PCB LAYOUT	
<b>6</b>	<b>PARTS LIST</b>	<b>27</b>
<b>7</b>	<b>APPENDIX</b>	<b>31</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/UWE/OAC OEC service manual.html](https://the-checkout-tech.com/manuals/UWE/OAC%20OEC%20service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)