

# **MAINTENANCE MANUAL**

## **OM SERIES**

**MODELS: OM-3000    OM-6000    OM-12K  
          OM-30K**

### **CONTENTS**

---

- 1 INTRODUCTION    1**
- 2 SPECIFICATION    2**
  - 1. SYSTEM BLOCK DIAGRAM**
  - 2. PHYSICAL LAYOUT OF ELECTRICAL CONNECTION**
  - 3. GENERAL SPECIFICATION**
- 3 INITIAL SETUP    6**
  - 1. INTERNAL FUNCTIONS AND SETTING METHODS**
  - 2. AUTO AND DEALER CALIBRATION PROCEDURES**
  - 3. DISABLE CALIBRATION WITH DIP SW.(S1)**
  - 4. OFFSET AND SPAN VALUE DATA**
  - 5. FLOW CHART**
- 4 TROUBLE SHOOTING    14**
  - 1. TROUBLE SHOOTING LOOP**
  - 2. PARTS AND COMPONENTS TROUBLE SHOOTING**
- 5 ELECTRICAL CIRCUITRY    18**
  - 1. SCHEMATICS**
  - 2. PCB LAYOUT**
- 6 PARTS LIST    23**
- 7 APPENDIX    28**

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/UWE/OM-3000 OM-6000 OM-12K OM-30K serv](https://the-checkout-tech.com/manuals/UWE/OM-3000%20OM-6000%20OM-12K%20OM-30K%20serv)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)