

MAINTENANCE MANUAL

PD BENCH/FLOOR SCALE SERIES

**MODELS: PD-B-30, PD-B-75, PD-B-150
PD-F-75, PD-F-150, PD-F-300
PD-L-150, PD-L-300, PD-L-600
PD-XL-150, PD-XL-300, PD-XL-600**

CONTENTS

- 1. INTRODUCTION**
- 2. SPECIFICATIONS**
 - 2.1 SYSTEM BLOCK DIAGRAM
 - 2.2 PHYSICAL LAYOUT OF ELECTRICAL CONNECTION
 - 2.3 GENERAL SPECIFICATIONS
- 3. INITIAL SETUP**
 - 3.1 INTERNAL FUNCTION AND SETTING METHODS
 - 3.2 AUTO AND DEALER CALIBRATION PROCEDURES
 - 3.3 DISABLE CALIBRATION WITH DIP SW. (S1)
 - 3.4 OFFSET AND SPAN VALUE DATA
 - 3.5 FLOW CHART
- 4. TROUBLE SHOOTING**
 - 4.1 TROUBLE SHOOTING LOOP
 - 4.2 PARTS AND COMPONENTS TROUBLE SHOOTING
- 5. ELECTRICAL CIRCUITRY**
 - 5.1 SCHEMATICS
 - 5.2 PCB LAYOUT
- 6. BILL OF MATERIAL**
- 7. APPENDIX**

MARCH 2004

Specifications and Function Subject to Change without Notice

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/UWE/PD service manual.html](https://the-checkout-tech.com/manuals/UWE/PD%20service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)