

## **MAINTENANCE MANUAL**

### **PS SERIES**

**MODELS: PS-3000, PS-6000, PS-12K, PS-30K  
PS-3000S, PS-6000S, PS-15KS, PS-30KS**

### **CONTENTS**

- 1. INTRODUCTION**
- 2. SPECIFICATIONS**
  - 2.1 SYSTEM BLOCK DIAGRAM
  - 2.2 PHYSICAL LAYOUT OF ELECTRICAL CONNECTION
  - 2.3 GENERAL SPECIFICATIONS
- 3. INITIAL SETUP**
  - 3.1 INTERNAL FUNCTION AND SETTING METHODS
  - 3.2 AUTO AND DEALER CALIBRATION PROCEDURES
  - 3.3 DISABLE CALIBRATION WITH DIP SW. (S1)
  - 3.4 OFFSET AND SPAN VALUE DATA
  - 3.5 FLOW CHART
- 4. TROUBLE SHOOTING**
  - 4.1 TROUBLE SHOOTING LOOP
  - 4.2 PARTS AND COMPONENTS TROUBLE SHOOTING
- 5. ELECTRICAL CIRCUITRY**
  - 5.1 SCHEMATICS
  - 5.2 PCB LAYOUT
- 6. BILL OF MATERIAL**
- 7. APPENDIX**

APR. 2001 REV 1

*Specifications and Function Subject to Change without Notice*

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*