

MAINTENANCE MANUAL

TDW SERIES

MODELS: TDW-3000, TDW-6000

CONTENTS

1. INTRODUCTION

2. SPECIFICATIONS

2.1 SYSTEM BLOCK DIAGRAM

2.2 PHYSICAL LAYOUT OF ELECTRICAL CONNECTION

2.3 GENERAL SPECIFICATIONS

3. INITIAL SETUP

3.1 INTERNAL FUNCTION AND SETTING METHODS

3.2 CALIBRATION

3.3 DISABLE CALIBRATION WITH mini jumper (JP2)

3.4 OFFSET AND SPAN VALUE DATA

3.5 FLOW CHART

4. TROUBLE SHOOTING

4.1 TROUBLE SHOOTING LOOP

4.2 PARTS AND COMPONENTS TROUBLE SHOOTING

5. ELECTRICAL CIRCUITRY

5.1 SCHEMATICS

5.2 PCB LAYOUT

6. BILL OF MATERIAL

7. APPENDIX

NOVEMBER 2003

Specifications and Function Subject to Change without Notice

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/UWE/TDW-3000 TDW-6000 service manual.htm>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)