

# MAINTENANCE MANUAL

## W22 INDICATOR SERIES

### CONTENTS

1. INTRODUCTION
2. SPECIFICATIONS
  - 2.1 SYSTEM BLOCK DIAGRAM
  - 2.2 PHYSICAL LAYOUT OF ELECTRICAL CONNECTION
  - 2.3 GENERAL SPECIFICATIONS
  - 2.4 OPTIONAL INTERFACE
  - 2.5 LOAD CELL CONNECTION
3. INITIAL SETUP
  - 3.1 PARAMETER SETTING
  - 3.2 CALIBRATION AND PARAMETER SETUP
  - 3.3 PRINTTING LABEL FORMATS
4. TROUBLE SHOOTING
  - 4.1 TROUBLE SHOOTING LOOP
  - 4.2 PARTS AND COMPONENTS TROUBLE SHOOTING
5. ELECTRICAL CIRCUITRY
  - 5.1 SCHEMATICS
  - 5.2 PCB LAYOUT
6. BILL OF MATERIAL
7. APPENDIX

NOV 2005

*Specifications and Function Subject to Change without Notice*

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/UWE/W22 service manual.html](https://the-checkout-tech.com/manuals/UWE/W22%20service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)