

# MAINTENANCE MANUAL

## W22 INDICATOR SERIES

### CONTENTS

#### 1. INTRODUCTION

#### 2. SPECIFICATIONS

- 2.1 SYSTEM BLOCK DIAGRAM
- 2.2 PHYSICAL LAYOUT OF ELECTRICAL CONNECTION
- 2.3 GENERAL SPECIFICATIONS
- 2.4 OPTIONAL INTERFACE
- 2.5 LOAD CELL CONNECTION

#### 3. INITIAL SETUP

- 3.1 PARAMETER SETTING
- 3.2 CALIBRATION AND PARAMETER SETUP
- 3.3 PRINTTING LABEL FORMATS

#### 4. TROUBLE SHOOTING

- 4.1 TROUBLE SHOOTING LOOP
- 4.2 PARTS AND COMPONENTS TROUBLE SHOOTING

#### 5. ELECTRICAL CIRCUITRY

- 5.1 SCHEMATICS
- 5.2 PCB LAYOUT

#### 6. BILL OF MATERIAL

#### 7. APPENDIX

NOV 2005

*Specifications and Function Subject to Change without Notice*

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*