

MAINTENANCE MANUAL

XM SERIES

MODELS: XM-1000 XM-2000 XM-4000
XM-10K XM-20K
XM-3000 XM-6000 XM-15K

CONTENTS

- 1 INTRODUCTION 1**
- 2 SPECIFICATION 2**
 - 1. SYSTEM BLOCK DIAGRAM**
 - 2. PHYSICAL LAYOUT OF ELECTRICAL CONNECTION**
 - 3. GENERAL SPECIFICATION**
- 3 INITIAL SETUP 6**
 - 1. INTERNAL FUNCTIONS AND SETTING METHODS**
 - 2. AUTO AND DEALER CALIBRATION**
 - 3. DISABLE CALIBRATION WITH DIP SW.(S1)**
 - 4. OFFSET AND SPAN VALUE DATA**
 - 5. FLOW CHART**
- 4 TROUBLE SHOOTING 15**
 - 1. TROUBLE SHOOTING LOOP**
 - 2. PARTS AND COMPONENTS TROUBLE SHOOTING**
- 5 ELECTRICAL CIRCUITRY 19**
 - 1. SCHEMATICS**
 - 2. PCB LAYOUT**
- 6 PARTS LIST 27**
- 7 APPENDIX 31**

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/UWE/XM service manual.html](https://the-checkout-tech.com/manuals/UWE/XM%20service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)