I. Warning

- (i) Strictly prohibit caught in the rain or washed with water. If you touch the water in careless, please clean it with dry cloth. If it's abnormity with the balance, please send it to the dealer, and we will try our best to satisfy our customer.
- (ii) Strictly prohibit park the balance in high temperature or wet place.
- (iii) Don't let the black beetle and inchling get into the balance to cause damage.
- (iv) Strictly prohibit hit and press badly.(Don't exceed the maximum capacity.
- (v) Strictly prohibit wipe outer shell and part of the balance with any chemicals)
- (vi) Please take out the dry batteries if it's leave unused for a long time, wipe the balance, enclose it with dryer in a plastic pocket.
- (vii) Please feedback if you have any suggestion about our products.

t	12.876	25.745	51.49	128.76	257.45

Catch Zero Range:

euten Zero Hunger							
Mode Zero Range	BS-L Series	BS-M Series	BS-A Series	BS-H Series			
"Zer 1"	0.5d	0.7d	0.8d	1.6d			
"Zer 2"	0.8d	1.5d	1.5d	2.5d			
"Zer 3"	1.5d	2.5d	2.5d	3.5d			
"Zer 4"	2d	3.5d	3.5d	4.5d			
"Zer 5"	2.5d	4.5d	4.5d	5.5d			

CONTENT

I. Warning	1
II. Installation	2
III. Preparation	4
IV. Specifications	5
V. Display Description	9
VI. Keyboard Function	10
VII. Parameter Setting	11

VIII. Operation	20
IX. Error Message	22
X. RS-232 Interface	23
XI. Power Supply	25
XII. Weight Conversion and Full Capacity Comparison	26

This is a "Table of Contents preview" for quality assurance

The full manual can be purchased from our store:

https://the-checkout-tech.com/manuals/unknown/BS Series user manual.html

And our free Online Keysheet maker:

https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/

HTTPS://THE-CHECKOUT-TECH.COM