

HP-ESR(P)-20 Pallet truck scale



**Service training
and Calibration**

售后服务培训



Content:

内容

- **Components of a pallet truck scale**
- 电子秤搬运车的组件

- **How a pallet truck scale works**
- 如何工作

- **Calibrating a pallet truck scale**
- 校准

- **Dismantling a pallet truck scale**
- 分解拆卸

- **Trouble shooting: 故障诊断**

Symptoms: categories of failures

症状：故障分类

Diagnosis: recognising the cause of failure and solving the problem

诊断：辨别故障原因，解决问题

Page 52 - Calibration

Page 53 - Two Point Calibration

Page 54 - Multi-Point Calibration