

VECTOR ®



Manual

VB Series Multi-function Electronic Balance

Models: VB610-2 VB6100-1
 VB510-2 VB5100-1
 VB310-2 VB3100-1
 VB210-2 VB2100-1
 VB110-2 VB1100-1

(Name definition:-2 is for read ability 0.01g; -1 is for read ability 0.1g)



Content

- 1. Introduction**
- 2. The structure of balance**
 - a. The external view of balance**
 - b. The front screen view of balance**
 - c. Display**
- 3. VB Series Electronic Balance's environmental requirements and specifications**
 - 3.1 Environmental requirements**
 - 3.2 Specifications**
- 4. Operation**
 - 4.1 Preparation**
 - 4.2 Weighing unit exchange**
 - 4.3 Weighing**
 - 4.3.1 General weighing mode**
 - 4.3.2 Weighing with container**
 - 4.3.3 Incremental quantity weighing**
 - 4.3.3.1 Fractionated incremental quantity weighing**
 - 4.3.3.2 Decremental quantity weighing**
 - 4.3.4 Weight difference weighing**
 - 4.3.5 Piece counting mode**
 - 4.3.6 Percentage weighing mode**
 - 4.3.7 Hanger for below-balance weighing (Optional choice)**
- 5. Parameter setting**
 - 5.1 Parameter setting table**
 - 5.2 Parameter setting adjusting method**
- 6. RS232 Interface**
 - 6.1 Transmission form: asynchronous transmission**
 - 6.2 Data output mode**
 - 6.3 Data output format**
 - 6.4 How judge stable output or unstable output**
 - 6.5 Command control**
 - 6.6 Connection of balance and external device**
- 7. Care and Maintenance**
- 8. Servicing**
- 9. Packing list**

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/Vector/VB-110 VB-1100 VB-210 VB-2100 VB-31>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)