

**VECTOR** ®



---

# ***Weighing Indicator VI 150***

*Operating Instruction*



---

## Directory

### **1 . Chapter 1 Main Specification**

### **2 . Chapter 2 Installation**

2.1 Front & Back View of Indicator

2.2 Keyboard Function

2.3 Connecting Loadcell to Indicator

### **3. Chapter 3 Calibration and Adjustment**

### **4. Chapter 4 Operating**

4.1 Starting and Starting auto zero setting at turning on

4.2 Manual Zero Setting (Semi-automatically setting zero )

4.3 Tare Function

4.4 Connecting Scoreboard to Indicator

4.5 Connecting Pinter to Indicator

4.6 Connecting Serial Communication port to Indicator

4.7 Setting of Time and Date

4.8 Storing, Checking and Deleting of Data

4.9 insufficient voltage indication

### **5. Chapter 5 Maintenance**

### **6. Chapter 6 Errors and Information**

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Vector/VI-150 user manual.html](https://the-checkout-tech.com/manuals/Vector/VI-150%20user%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)