

VECTOR ®



Weighing Indicator VI 150

Operating Instruction



Directory

1 . Chapter 1 Main Specification

2 . Chapter 2 Installation

2.1 Front & Back View of Indicator

2.2 Keyboard Function

2.3 Connecting Loadcell to Indicator

3. Chapter 3 Calibration and Adjustment

4. Chapter 4 Operating

4.1 Starting and Starting auto zero setting at turning on

4.2 Manual Zero Setting (Semi-automatically setting zero)

4.3 Tare Function

4.4 Connecting Scoreboard to Indicator

4.5 Connecting Pinter to Indicator

4.6 Connecting Serial Communication port to Indicator

4.7 Setting of Time and Date

4.8 Storing, Checking and Deleting of Data

4.9 insufficient voltage indication

5. Chapter 5 Maintenance

6. Chapter 6 Errors and Information

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*