

VECTOR ®



VL 200 calibration manual (V1.02)

Insert the short-circuiting ring on the J32 of PCB, enable the indicator into calibration mode (factory default is inserted to allow short-circuit ring calibration, the new standard for the first time this step can be omitted), then follow the steps by below table:

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*