

VECTOR ®



VL 200 calibration manual (V1.02)

Insert the short-circuiting ring on the J32 of PCB, enable the indicator into calibration mode (factory default is inserted to allow short-circuit ring calibration, the new standard for the first time this step can be omitted), then follow the steps by below table:

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Vector/VL-200 calibration manual.html](https://the-checkout-tech.com/manuals/Vector/VL-200%20calibration%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)