

# **VECTOR-VL 200**

## **Weighing Indicator**

# **User Manual**

**( Version 1.02 )**

# Content

<b>Chapter 1 Technical Parameter.....</b>	<b>1</b>
<b>Chapter 2 Installation .....</b>	<b>2</b>
(1)VL 200 ( column type ) weighing indicator front side function instruction and back side function instruction.	
(2) Load cell & weighing indicator VL 200 ( column type ) connection	
(3) VL 200 ( desktop ) weighing indicator front side function instruction and back side function instruction.	
(4)Load cell & weighing indicator VL 200 ( desktop ) connection	
<b>Chapter 3 Operation Instruction.....</b>	<b>4</b>
(1). Button function	
(2). Startup&Shut down	
(3). Battery use	
(4). Startup Zero operation and Manual zero operation	
(5) Tare operation	
(6). Unit price input	
(7) Accumulation clear and Accumulation display and accumulation clear	
(8)Saving and re-call of unit price	
(9)Power-saving mode	
(10)Inner code display	
<b>Chapter4 Optional function .....</b>	<b>8</b>
(1)RS232 communication	
(2)Serial port print	
(3)Scoreboard output	
(4)Upper and lower limits alarming	
<b>Chapter 5 Information Instruction.....</b>	<b>14</b>
<b>Chapter 6 Maintenance and Attention.....</b>	<b>15</b>

**Dear user:**

**Please read this manual before using.**

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Vector/VL-200 user manual.html](https://the-checkout-tech.com/manuals/Vector/VL-200%20user%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)