



**COMPLETE MANUAL**  
**For**  
**Personal Scale AV-200-EC-P**  
**Baby Scale AV-20-EC**  
**Chair Weigher VEH-200-EC.**



All Scales are EC type-approved non-automatic weighing instrument Accuracy class (III)

Basically, the Weighing Indicator (TI-1200-S), is the same in all Scales.

## TABLE OF CONTENTS

	Page
INTRODUCTION TO THE TI-1200-S DIGITAL INDICATOR	2
INSTALLATION TI-1200-S	3
CONFIGURATION	5
CALIBRATION	10
SPECIFICATIONS	10
SERIAL PORT INFORMATION	11
DISPLAYED ERROR CODES AND FAULT LOCALIZATION	13
OPERATION	14
INSTALLATION AV-200-EC-P	16
INSTALLATION AV- 20-EC	17
INSTALLATION AV200-EC-P	17
<b>INTRODUCTION TO THE TI-1200-S DIGITAL INDICATOR</b>	

18


TI-1200-S Digital Indicator is a general purpose, industrial grade weight indicator.

TI-1200-S comes with an 230 VAC / 9 VDC adapter or with an internal 9 V battery (for the Chair Weigher).

**TEST CERTIFICATE: Number FIT 01.I.02 class III**

TI-1200-S has 2 menus for configuration:

- Setup ("F") which configure the Indicator to your weighing application.
- User ("A") which configure the Indicator to the serial communication.

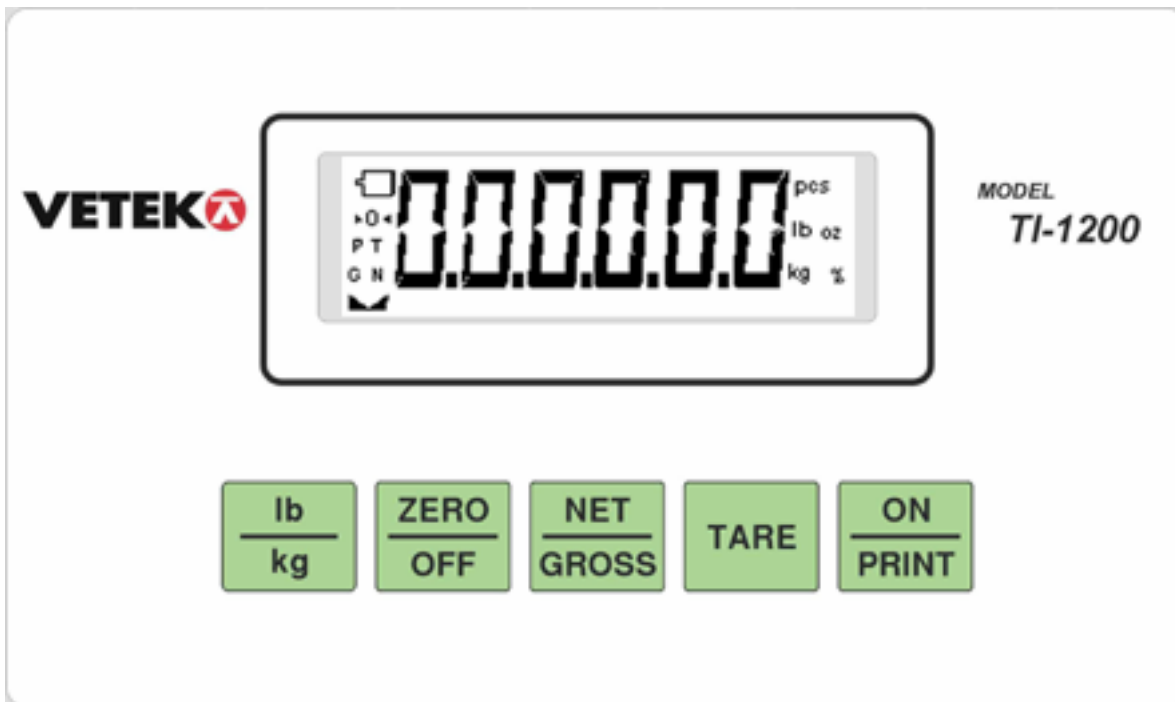

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/Vetek/AV-200-EC-P AV-20-EC VEH-200-EC com>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)