


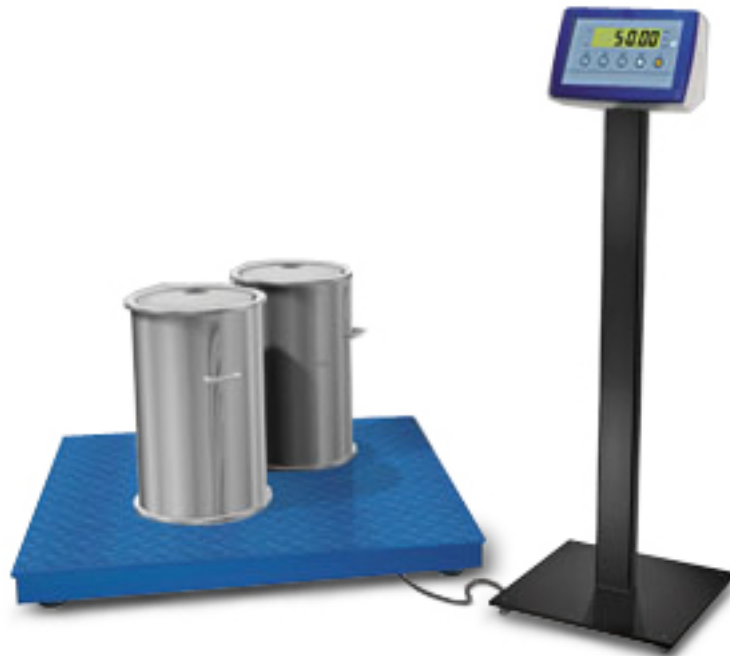

# Manual EPFL



## INDEX

<b>1. INTRODUCTION</b> .....	<b>3</b>
<b>2. MAIN TECHNICAL SPECIFICATIONS</b> .....	<b>4</b>
<b>3. SYMBOLS</b> .....	<b>5</b>
<b>4. INSTALLATION</b> .....	<b>5</b>
4.1 DFW METAL OR STAINLESS STEEL VERSIONS.....	5
4.2 DFW ABS VERSION.....	6
4.3 DFWLI – DFWLKI VERSION.....	6
4.4 DFWPM VERSION.....	7
<b>5. POWER SUPPLY &amp; START UP</b> .....	<b>8</b>
5.1 DFW, DFWL POWER SUPPLY.....	8
5.2 DFWPM POWER SUPPLY.....	8
5.3 TURNING ON / OFF THE INSTRUMENT.....	8
<b>6. FRONT PANEL KEYS AND INDICATORS (5 key version)</b> .....	<b>9</b>
<b>7. FRONT PANEL KEYS AND INDICATORS (17 KEY VERSION)</b> .....	<b>13</b>
<b>8. SYMBOLS ON THE LCD DISPLAY</b> .....	<b>15</b>
<b>9. BASIC FUNCTIONS</b> .....	<b>16</b>
9.1 ZERO SCALE.....	16
9.2 TARE OPERATIONS.....	16
9.3 LIMITATION OF THE TARE FUNCTIONS.....	17
9.4 AUTO POWER OFF FUNCTION.....	18
9.5 LOW BATTERY WARNING.....	18
9.6 "TILT" DEVICE.....	18
9.7 MULTI RANGE FUNCTIONING (for legal for trade approved instruments).....	19
9.8 REMOTE CONTROL (OPTIONAL).....	19
9.8.1 STAND-BY FUNCTION.....	19
9.9 DATE/TIME ADJUSTMENT (OPTIONAL).....	19
9.10 "SCREEN SAVER" FUNCTION (OPTIONAL OR INCLUDED DEPENDING ON THE MODEL).....	20
9.11 PRINTING.....	20
9.12 REENABLING THE PRINTOUTS AND THE INDICATOR FUNCTIONS.....	21
9.13 DISPLAY OF METRIC DATA (inFO).....	21
<b>10. ADDITIONAL FUNCTIONS OF THE 17-KEY INDICATOR</b> .....	<b>22</b>
10.1 STORED TARE MEMORY VALUES.....	22
10.2 ENTERING THE IDENTIFICATION CODE.....	22
10.3 KEYBOARD LOCK.....	23
10.4 REPETITION OF THE LAST PRINTOUT MADE.....	23
<b>11. SELECTABLE OPERATING MODES</b> .....	<b>23</b>
11.1 UNIT OF MEASURE/POUNDS CONVERSION (Std).....	24
11.2 NET/GROSS SWITCH (ntgS).....	24
11.3 SET POINT ON THE GROSS WEIGHT (StPG).....	24
11.4 SET POINT ON THE NET WEIGHT (StPn).....	25
11.5 INPUT/OUTPUT (in out).....	25
11.6 SINGLE - MULTISCALE REPEATER (MAstr).....	26
11.7 ALIBI MEMORY (ALibi) (OPTIONAL).....	28
11.8 +/- TOLERANCE CHECK (ChECK).....	31
11.9 SAMPLE WEIGHT PERCENTAGE (3.PErC.).....	32
11.10 DISPLAY WITH SENSITIVITY X 10 (VISS) (TO BE USED IN TESTING DURING THE CALIBRATION).....	33
11.11 HOLD: FREEZING THE WEIGHT ON THE DISPLAY (HLd).....	33
11.12 WEIGHT PEAKS DETECTION (PEaK).....	33
11.13 HORIZONTAL TOTALIZER (Sum of lots) (tot 0).....	34
11.14 VERTICAL TOTALIZER (Sum by recipe) (tot S).....	35
11.15 PIECE COUNTING (COUn).....	35
<b>12. INDICATOR CONNECTED TO PRINTER, FUNCTIONING BY BATTERY</b> .....	<b>37</b>
<b>13. INSTRUMENT MESSAGES WHILE IN USE</b> .....	<b>38</b>
<b>DECLARATION OF CONFORMITY</b> .....	<b>39</b>
<b>WARRANTY</b> .....	<b>39</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Vetek/EPFL user manual.html](https://the-checkout-tech.com/manuals/Vetek/EPFL%20user%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)