


Manual Weighingblock VB2 series and Uniscale

Note: At page 8 in this manual you will find a short form instruction. Normally the only instruction shipped together with the Scale.



Overview different ranges.

| Model | Model | Capacity / Graduation |
|---------------|--------------------|-----------------------------|
| VB2-30-EC | | Max 30 kg / 10 g |
| VB2-100-EC | | Max 100 kg / 10 (50) g |
| VB2-200-EC | | Max 200 kg / 20 (100) g |
| VB2-200-EC-TM | | Max 200 kg / 100 g |
| VB2-200-50-TM | | Max 200 kg / 50 g |
| VB2-30-05 | | Max 30 kg / 5 g |
| VB2-100-02 | UNISCALE 100kg/2g | Max 100 kg / 2 g |
| VB2-100-10 | | Max 100 kg / 10 g |
| WS-130 | | Max 130 kg / 10 g (special) |
| VB2-130-10 | UNISCALE 130kg/10g | Max 130 kg / 10 g |
| VB2-200-10 | | Max 200 kg / 20 g |
| | UNISCALE 200kg/5g | Max 200 kg / 5 g |
| | UNISCALE 200kg/50g | Max 200 kg / 50 g |

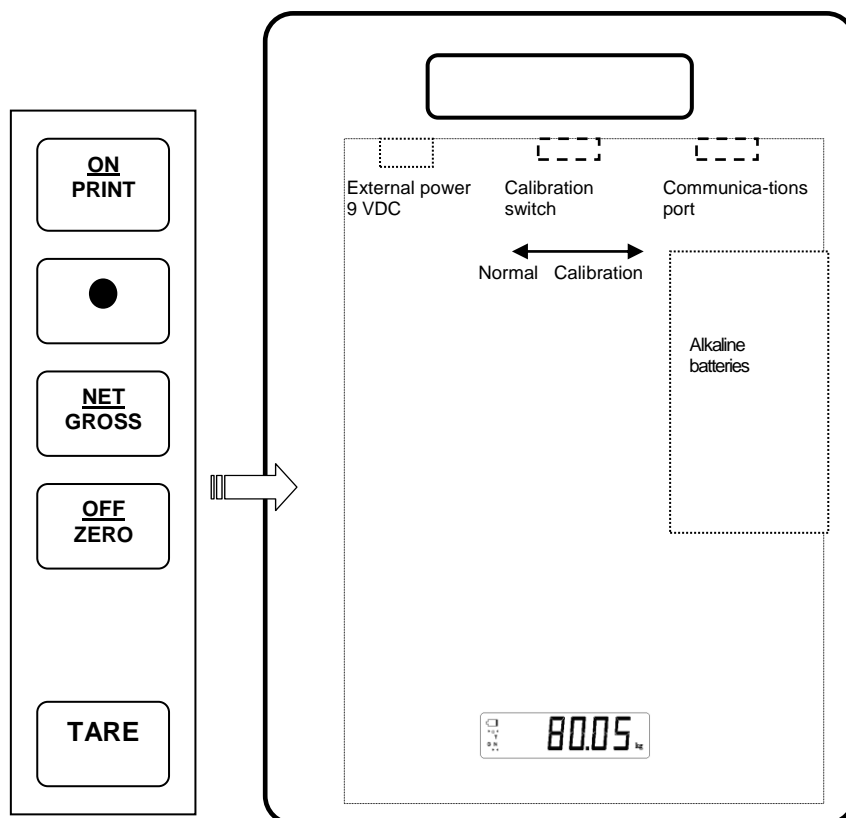

The Weighingblock is a robust Scale. It is designed for portable use. When transported by car between different working places we recommend using of a protected space or a case. This will extend the interval for service.

Table of contents

| | |
|---|---|
| Introduction, Keyboard Functions | 2 |
| Configuration and Setup Menu. Display Parameters | 3 |
| Calibration | 4 |
| Specifications and Displayed Error Codes | 5 |
| Fault localization and repair | 6 |
| Instruction for handling Solenoid module VBB-10 | 7 |
| | 8 |
| | 9 |

Page

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Vetek/VB2 and UniScale user manual.html](https://the-checkout-tech.com/manuals/Vetek/VB2%20and%20UniScale%20user%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)