

USER MANUAL Beam Scale WB 3ton/0,1kg



Beam Scale for general weighing.

This is a simple and robust Scale for normal environmental. Not to be used in wet or aggressive applications. Very robust steel construction and easy to move. Lifting handles. Pillar for Indicator included.

- Weighing EU pallets, parcels, small tanks, containers and conveyors or anything.
- Free position of the beams
- Industrial design.
- Tare and Print function.
- Option: Printer
- Option: Battery supply
- Option: EC-Approval.
- Other models of Indicators e.g. for batching.

Specification

Dimension: 2 pcs 1210 x 100 mm. Height 95 mm.

Surface: Painted, IP67
Capacity: 3000 kg

Graduation: 100 g (other to be specified before delivery

Weight: Totally 30 kg.

Power: 230 VAC / 9 VDC adaptor included. Display: 6 digits 19 mm LCD with backlight.

Output: RS232 Cable: 4,5 m

Installation

- 1. Adjust the feets on the beams so the beams stand steady. Check that nothing other than the feets takes load
- 2. Connect 230 VAC adapter and both cables from the beams.
- 3. Push ON. Ready!

INTRODUKTION

 $TI-1200-S\ Digital\ Indicator\ is\ a\ general\ purpose,\ industrial\ grade\ weight\ indicator.\ Normally\ it\ comes\ calibrated\ 3000\ kg\ /\ 0,1\ kg$

Manual-WB-3ton Rev. 01.2005 Printed: 2006-02-03 page 1

This is a "Table of Contents preview" for quality assurance

The full manual can be purchased from our store:

https://the-checkout-tech.com/manuals/Vetek/WB 3ton user manual.html

And our free Online Keysheet maker:

https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/

HTTPS://THE-CHECKOUT-TECH.COM