

Avery Weigh-Tronix

Model 1080 Weight Indicator



Service Manual

Table of Contents

	<i>page</i>
Manual revision history	5
Chapter 1 General information and warnings	7
About this manual	7
Text conventions	7
Special messages	7
Installation	8
Safe handling of equipment with batteries	8
Wet conditions	8
Routine maintenance	8
Cleaning the machine	9
Training	9
Sharp objects	9
FCC and EMC declarations of compliance	9
Declaration of Conformity	10
Chapter 2 Introduction	11
Unpacking and Setup	11
Front Panel	12
Keys	12
Numeric Entry Procedure	13
Annunciators	14
Error Messages	15
Chapter 3 Using the Menus	17
Available Menus	17
User menu (password is 111)	17
Service menu (password is 0801)	17
Supervisor menu (password is 1793)	17
Accessing the Menus	18
User Menu	19
Service Menu	22
CAL Submenu for Analog Scales	23
SCALE Submenu	27
APP (Applications) submenu	41
Extra Info: Print Format Editing	47
Thermal Labels Print Formats	50
SERIAL submenu	54
TEST submenu	65
AUDIT submenu	70
INPUT submenu	71
OUTPUT submenu	72
OPTION submenu	74
Supervisor Menu	102
DATE (Set date)	102
HOUR (Set time)	104
SETUP (Setup menu)	105
TEST (Test menu)	121
AUDIT (Audit counters) menu	125
Chapter 4 SensorComm Configuration and Calibration	126
Introduction	126

Enable SensorComm	126
Enable/Configure Weigh-Bars	127
CAL submenu for SensorComm scales (North America only)	128
CORNER (SensorComm Cornering)	129
GHOST (Ghost Calibration Factors)	130
Chapter 5 SensorComm Error Messages	131
Chapter 6 Remote Display Functionality	132
Remote Display Modes: (App. Settings – Remote Indicator)	132
Mode 1: Remote weight display only	132
Mode 2: Remote weight display with annunciators	132
Mode 3: Remote weight display with keypad	132
Mode 4: Remote weight display with keypad and annunciators	133
Remote Display Modes: (Serial Port Settings – Host Indicator)	133
Mode 4100: Remote weight display only	133
Mode 1: Remote weight display only	133
Mode 2: Remote weight display with annunciators	133
Mode 3: Remote weight display with keypad	134
Mode 4: Remote display with keypad and annunciators	134
Communications Timeout:	135
Chapter 7 Network Connections	136
Default network settings feature	137
General Description:	137
Fieldbus #1 default values:	137
Fieldbus #2 default values:	137
UPD indicator Discovery	137
General Description	137
Protocol:	137
Chapter 8 Ethernet Industrial Protocols	139
Ethernet IP Explicit Messaging	139
AWTX Input Point Object (Data Out)	139
AWTX Output Point Object (Data In)	139
Ethernet IP Implicit Messaging	140
AWTX Assembly Instance for PLC Configuration	140
ModBus/TCP	140
Starting Register Locations for PLC Configuration	140
Chapter 9 Optional Analog Output Board Installation	141
Chapter 10 Complete Menu Structures	145
Supervisor and User Menus	145
Service Menu	146
Chapter 11 Technical Illustrations	147
Enclosure parts and assembly	147
System block diagram	148
1080 PC Boards	149
1080 PC Boards (cont.)	150
Trips interface unit (TIU3) (optional) parts & assembly	151
Analog Output Card	152
Panel Mount Illustrations	153
1080 Dimensional Drawings	154

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Weigh-Tronix/1080 Indicator service manual.htm](https://the-checkout-tech.com/manuals/Weigh-Tronix/1080%20Indicator%20service%20manual.htm)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)