

# Model 1080

## Indicator



## User Instructions

# Table of Contents

	<i>page</i>
<b>Chapter 1 General information and warnings</b> .....	5
About this manual .....	5
Text conventions .....	5
Special messages .....	5
Installation .....	6
Safe handling of equipment with batteries .....	6
Wet conditions .....	6
Routine maintenance .....	6
Cleaning the machine .....	7
Training .....	7
Sharp objects .....	7
FCC and EMC declarations of compliance .....	7
Declaration of Conformity .....	8
<b>Chapter 2 Introduction</b> .....	10
Specifications .....	10
<b>Chapter 3 Front Panel</b> .....	11
Annunciators .....	12
Numeric Entry Procedure .....	13
<b>Chapter 4 Indicator Operations</b> .....	14
General Gross Weighing .....	14
General Tare/Net Weighing .....	14
Using Outputs in the General Weighing Application .....	15
Accumulator Weighing .....	16
Using Outputs in the Accumulator Application .....	17
Batch Weighing .....	18
Auto Batching by Weight .....	21
Manual Batching by Percentage .....	22
Checkweighing .....	23
Limits Mode: Entering Upper and Lower Limits .....	24
Performing a Checkweighment in Limits Mode .....	24
Sample Mode: Using Product to Set Target Weight .....	25
Performing a Checkweighment in Sample Mode .....	25
Using the Statistics Feature .....	25
Using Outputs in Checkweigher Application .....	28
Target Outputs .....	29
Counting .....	30
Bulk Sampling .....	30
Dribble Sampling .....	31
Displaying Count Information .....	32
Using Outputs in the Counting Application .....	32
Peak Weighing .....	33
Using Outputs .....	33
Split (Axle) Weighing .....	35
<b>Chapter 5 Communications</b> .....	36
Thermal Labels Print Formats .....	37
<b>Chapter 6 Error Messages</b> .....	39
<b>Chapter 7 Menu Mode</b> .....	40

User Menu .....	40
Supervisor Menu .....	41
DATE (Set date) .....	43
HOUR (Set time) .....	44
SETUP (Setup menu) .....	44
TEST (Test menu) .....	61
AUDIT (Audit counters) menu .....	65
<b>Chapter 8 Indicator Diagnostics</b> .....	67
Testing Indicator Functions .....	67
<b>Chapter 9 Ethernet Industrial Protocols</b> .....	70
Ethernet IP Explicit Messaging .....	70
AWTX Input Point Object (Data Out) .....	70
AWTX Output Point Object (Data In) .....	70
Ethernet IP Implicit Messaging .....	71
AWTX Assembly Instance for PLC Configuration .....	71
ModBus/TCP .....	71
Starting Register Locations for PLC Configuration .....	71

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Weigh-Tronix/1080 Indicator user manual.html](https://the-checkout-tech.com/manuals/Weigh-Tronix/1080%20Indicator%20user%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)