



Avery Weigh-Tronix

SCALES FOR AGRIBUSINESS



Model 2040/2040XL Indicator User's Manual

Table of Contents

| | |
|--|----|
| Table of Contents | 3 |
| Specifications | 5 |
| Introduction | 7 |
| About This Manual | 7 |
| The Model 2040 Indicator | 7 |
| Key Descriptions | 8 |
| Annunciators | 8 |
| Display Messages | 9 |
| Entering Alphanumeric Characters | 10 |
| Getting Started | 11 |
| Mounting the Model 2040 | 11 |
| Cable Connections and Power Requirements | 12 |
| User's Reference Chart | 15 |
| Operational Overview | 17 |
| Menus | 17 |
| Gross Mode and Power Failures | 17 |
| Data Entry | 17 |
| User Menu | 18 |
| TIME | 19 |
| DATE | 19 |
| VOLUME | 20 |
| SLEEP | 20 |
| Supervisor Menu | 21 |
| EDIT | 22 |
| CLEAR.ACC | 22 |
| BAT.CNT | 23 |
| ING.TOL & DELAY | 23 |
| TIMER | 24 |
| CLR.DAT | 25 |
| MIX.ID | 26 |
| CLR.TIM | 26 |
| Indicator Operation Methods | 27 |
| Manual Load/Unload | 27 |
| Automatic Load/Unload | 27 |
| Automatic Load/Unload using Feed Supervisor® | 27 |

| | |
|---|----|
| Manual Weighing Procedures | 28 |
| Simple Weighing | 28 |
| Loading/Unloading Ingredients Into A Mixer (Manual Operation) | 28 |
| Loading Or Unloading Ingredients By Using the XM64 (Manual Operation) | 29 |
| Using ID | 30 |
| Configuring for Automatic Batching Procedure | 31 |
| Ingredient List | 31 |
| Recipe Features | 32 |
| Creating a Recipe | 32 |
| Recipe Editing Operations | 34 |
| Pen Editing | 35 |
| Pen Details | 36 |
| Automatic Batching Procedure | 37 |
| Basic Batching Steps | 37 |
| Other Operations | 40 |
| Manual Hold Mode | 40 |
| Feed Supervisor® Data Transfer | 40 |
| Mix Timer Operation | 41 |
| Viewing the Accumulators | 42 |
| The XM64 Data Transmitter/Receiver | 46 |
| Printing | 46 |
| Indicator Diagnostics | 51 |
| Access the Test Menu | 51 |
| RD64/XL/M Remote Displays and XM64 Remote Transmitter | 55 |
| Remote Displays | 55 |
| XM64 Remote Transmitter/Receiver | 55 |
| Troubleshooting | 56 |
| Power-On | 56 |
| Indicator Over/Under Capacity | 57 |
| Inaccurate Weight Readings | 57 |
| Measuring Supply Battery Voltage | 58 |
| Service Repairs | 58 |
| Windows® Setup | 59 |
| To Download | 60 |
| Transfer Data Module (TDM-40) | 60 |

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Weigh-Tronix/2040 and 2040XL Indicator user m](https://the-checkout-tech.com/manuals/Weigh-Tronix/2040%20and%202040XL%20Indicator%20user%20manual.pdf)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)