



WEIGH-TRONIX

SCALES FOR AGRIBUSINESS



*RD712 & RD712XL
Remote Displays*



Model 615 / 615XL Indicator Service Manual

Table of Contents

Introduction	5
Using the Hidden Keys	5
Entering Data with Hidden Arrow Keys	6
Viewing the Current Configuration Code	6
Entering a New Configuration Code	8
Determining Axle Sizes	9
Determining a Configuration Code	9
Table 1: A Sample Set of Configuration Choices & Its Corresp. Config. Code)	9
Table 2. Configuration Code Chart for Weigh-Tronix Weigh Bars	11
Table 3: Valid Numbers for the Configuration Code	12
Table 4: Model 615/XL Calibration Table	12
Determining the Custom Sensitivity Rating	13
Table 5: Row Numbers for Custom Capacity x Increment Size	14
Keying in the Custom Sensitivity Rating	14
Calibrating with a Known Weight	15
Getting Ready to Calibrate with a BLH Model 625 Calibrator	16
Table 6: Calibrator Connections and Calibration Tables	16
Calibrating with a BLH Model 625 Calibrator	17
Viewing the Internal Raw Counts Display	18
Viewing and Selecting Overcapacity	18
Selecting Continuous Serial Output	19
Viewing the Software Release Number	19
Circuit Descriptions	20
Power Supply	20
Analog to Digital Circuitry	21
Microprocessor Circuitry	22
Display Circuitry	23
Technical Illustrations, Parts Lists, and Schematics	25
Programming Appendix: Using the Eaton and J-Star Configuration Code Charts	Appendix 1
Table 7: Eaton: A Sample Set of Configuration Choices (& Corresp. Contig. Code)	Appendix 1
Table 8: J-Star: A Sample Set of Configuration Choices (& Corresp. Config. Code)	Appendix 1
Standard and Optional Procedures for Accessing Optional Setup Modes	Appendix 2
Table 9: Eaton Configuration Code Chart	Appendix 3
Table 10: J-Star Configuration Code Chart	Appendix 4

Pages are numbered consecutively beginning with the cover page.

Illustrations

Figure 1: Hidden Keys on the Front Panel of the Model 615/XL Farm Indicator	5
Figure 2: Programming Flow Chart	7
Model 615/615XL Indicator System Block Diagram	25
Model 615 Indicator Parts and Assembly	26
Model 615 Keypad Overlay and Schematic	27
Model 615 Main PC Board A/D and Component Parts List	28
Model 615 Main PC Board A/D Schematic	29
Model 615XL Parts and Assembly	30
Model 615XL Keypad Board Assembly and Schematic	31
Model 615XL Main PC Board A/D and Component Parts List	32
Model 615XL Main PC Board Assembly Schematic	33
Model 615XL Display PC Board Component Parts List and Schematic	34
Model 615XL Weigh Bar Panel Assembly and Cable/Connector Schematics	35
RD712/712XL Remote Display Parts List and Assembly	36
RD712 Remote Display PC Board, Component Parts List and Schematic	37
RD712XL Remote Display PC Board, Component Parts List and Schematic	38
XM710-L Wireless Remote Installation	39

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Weigh-Tronix/615 and 615XL and RD-712 and R](https://the-checkout-tech.com/manuals/Weigh-Tronix/615%20and%20615XL%20and%20RD-712%20and%20RD-712XL)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)