



# Model 640 Series Indicators

Model 640XL



Model 640

Model 640M



## User Instructions

NORTH AMERICA

# Table of Contents

	<i>page</i>
<b>Chapter 1 General Information and Warnings</b> .....	5
About this manual .....	5
Installation .....	6
Safe handling of equipment with batteries .....	6
Routine maintenance .....	6
Cleaning the machine .....	7
Training .....	7
Sharp objects .....	7
FCC and EMC declarations of compliance .....	8
<b>Chapter 2 Introduction</b> .....	10
Front Panel .....	10
Key Descriptions .....	11
Annunciators .....	11
Display Messages .....	12
Numeric Entry Procedure .....	13
Getting Started .....	13
Mounting the Model 640 .....	14
Cable Connections .....	15
Model 640 and 640XL Bottom Panels .....	15
Model 640M Lower Connector Options .....	16
Connector Pin Descriptions .....	17
<b>Chapter 3 User Menu</b> .....	18
Editing The A-LIST .....	20
Accessing the Accumulator Statistics .....	21
Clearing Accumulators .....	22
Viewing or Changing the Time .....	23
Viewing or Changing the Date .....	24
Entering / Viewing the Audible Keypad Setting .....	24
Entering / Viewing the Sleep Parameter .....	25
Setting the Backlight Operation .....	25
Entering / Viewing the Language Selection (Not currently functioning) .....	27
Printing a Configuration Report .....	27
<b>Chapter 4 Weighing Procedures</b> .....	29
Simple Weighing .....	29
Gross/Tare/Net (GTN) Weighing (single tare example) .....	29
Loading or Unloading Consecutive Net Amounts .....	30
Loading/Unloading Net Amounts (XM64 Transmitter) .....	30
Using Memory Channels to Accumulate .....	31
Editing Memory Channel List .....	31
Accessing Memory Channels .....	32
Using Memory Channels to Accumulate .....	32
Clearing the Accumulators .....	32
To Clear a Specific Memory Channel .....	34
To Print an Individual Memory Channel .....	34
To Print All Memory Channels .....	34
Manual Hold for Mobile Systems .....	37
Using Hold Mode for Maintaining Weight Overnight .....	37
Animal Weighing Using AUTO-LOC Feature .....	37
How to Set Up AUTO-LOC .....	38

Weighing Individual Animals with Standard Mode AUTO-LOC .....	40
Weighing Individual Animals with Advanced Mode AUTO-LOC .....	40
Printing .....	42
<b>Chapter 5 Test Menu .....</b>	<b>45</b>
Test Menu Summary .....	45
Access the Test Menu .....	46
Test Menu Items .....	46
VOLTS (Input voltage) .....	46
LCD (LCD Display test) .....	47
KEYPAD (Keypad test) .....	47
A/D (View /Test A to D counts) .....	48
SERIAL (Testing Serial Ports) .....	48
INPUT (Testing the Input) .....	49
SOFT (Software PN, version and revision) .....	49
<b>Chapter 6 Remote Displays &amp; XM64 Remote Transmitter .....</b>	<b>51</b>
Remote Displays .....	51
XM64 Wireless Remote Transmitter .....	52
<b>Chapter 7 Specifications .....</b>	<b>53</b>
<b>Chapter 8 Appendix: Quick Programming Guide .....</b>	<b>55</b>
How to Verify the Scale is Weighing Properly .....	55
To Access the Setup Menu (640) .....	55
(CONFIG) Finding and Entering a Configuration Code Number .....	55
Configuration Code Numbers for Common applications: .....	58
Configuring the Model 640 for Other Brand Weigh Bars and Loadcells .....	58
Viewing/Entering a Custom Calibration Number .....	59
How to Configure Filtering .....	60
<b>Chapter 9 Appendix: Troubleshooting .....</b>	<b>62</b>
Power ON Problems .....	62
Indicator +/- RANGE Problem .....	63
Indicator Over or Under Capacity Problem .....	64
Inaccurate Weight Readings .....	64
Drifting Weight Readings .....	64
Loss of Data: Time & Date or Memory channels .....	65
How to Get Service Repairs .....	65

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/Weigh-Tronix/640 and 640M and 640XL Indicators>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)