



# Model 715 Service Manual

# Table of Contents

Programming .....	5
Configuration Mode .....	5
Viewing Current Configuration Code .....	6
Entering A New Configuration Code .....	6
Axe Sizes .....	7
Using Table 1: Configuration Code Example .....	7
<i>Table 1: Configuration Code Chart</i> .....	8
<i>Table 2: Valid Numbers For Configuration</i> .....	9
<i>Table 3: Model 715 Calibration Table</i> .....	9
Configuring Custom Sensitivity With Capacity x Increment Size .....	10
<i>Table 4: Row Numbers For Custom Capacity x Increment Size</i> .....	11
Configuring Custom Warning Alarm Factor .....	12
Calibration Mode .....	14
Calibrating Using A Known Weight .....	14
Getting Ready To Calibrate With BLH Model 625 Calibrator .....	15
<i>Table 5: Calibrator Connections And Calibration Tables</i> .....	15
Calibrating With A BLH Model 625 Calibrator .....	15
Auto Zero Tracking Selection .....	16
Internal Raw Counts Mode .....	17
Viewing Internal Counts Display .....	17
Software Revision Mode .....	17
Circuit Description .....	18
Power Supply .....	18
Analog to Digital Circuitry .....	19
Microprocessor Circuitry .....	20
Display Circuitry .....	21
Optional RS-232 or Remote Circuitry .....	21
Programming Appendix	
Configuration For Eaton, J-Star, and Two Additional Weigh-Tronix Menus .....	23
<i>Table 6: Eaton: A Sample Set of Configuration Choices</i> .....	24
<i>Table 7: J-Star: A Sample Set of Configuration Choices</i> .....	24
Figure 2: Standard and Optional Procedure for Accessing Optional Setup Modes .....	25
<i>Table 8: Eaton Configuration Code Chart</i> .....	26
<i>Table 9: J-Star Configuration Code Chart</i> .....	27

# Illustrations

Figure 1: Hidden E Key .....	5
Model 715 Indicator System Block Diagram.....	29
Model 715 Indicator Parts and Assembly .....	30
Weigh Bar Panel Assembly and Cable/Connector Schematics .....	31
Keypad Overlay .....	32
Model 715 Main PC Board A/D Assembly .....	33
Model 715 Main PC Board A/D Schematic .....	34
RD712/XL Remote Display Assembly and Parts List .....	35
RD712 Display PC Board A/D Components and Schematic .....	36
RD712/XL Display PC Board, Components and Schematic .....	37
XM710-L Wireless Remote Installation .....	38

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Weigh-Tronix/715 Indicator service manual.html](https://the-checkout-tech.com/manuals/Weigh-Tronix/715%20Indicator%20service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)