

Avery Weigh-Tronix



Industrial Indicators Terminal Mode Serial Communications

**Loadstar – L215 & L225
Evolution – E1105, E1110, E1205 & E1210**

English

76102-743 Issue 3 October 2007



Table of contents

1. Scope	6
2. Operation	7
2.1 Entry into and exit from dumb terminal mode	7
2.2 Dumb terminal mode operation	7
2.3 Terminal control in normal weighing mode	7
3. Supported commands	8
3.1 Display and formatting commands	8
3.1.1 Enter Terminal Mode	8
3.1.2 Exit Terminal Mode	8
3.1.3 Enquire Terminal Mode	9
3.1.4 Clear Display	9
3.1.5 Display Text Message	9
3.1.6 Upload and Download PLU	10
3.1.7 Destroy Terminal Mode Soft Keys	10
3.1.8 Create Soft Key	10
3.1.9 Update the Weight	11
3.1.10 Display the Weight	11
3.1.11 Line Draw Graphics	11
3.1.12 Data Entry Title	12
3.1.13 Password Text Entry	12
3.2 Indicator control commands	12
3.2.1 Enable and Disable Data Entry	12
3.2.2 Return to Top Level Soft Key	12
3.2.3 Restart Indicator	13
3.2.4 Remote Print Request	13
3.2.5 Suppress Soft Keys	13
3.2.6 Routing Data Streams	14
3.2.7 Direct I/O Control	14
3.2.8 Enable and Disable Indicator Function	15
3.2.9 Set Time and Date	15
3.2.10 Keyboard Enable and Disable	15
3.3 Indicator weight and tare commands	16
3.3.1 Get Weight	16
3.3.2 Zero Request	16

3.3.3	Sat Tare Value.....	16
3.3.4	Clear Current Semi Auto Tare	17
3.3.5	Set Tare Value.....	17
3.3.6	Set clear Preset Tare.....	17
3.4	Indicator application commands	18
3.4.1	Current Active Function	18
3.4.2	Current Active PLU	18
3.4.3	Activate PLU	18
3.4.4	Check Weigh Low Value (use in Limits mode)	19
3.4.5	Check Weigh High Value (use in Limits mode)	19
3.4.6	Check Weigh Target Accept (use in Tol mode)	20
3.4.7	Check Weigh Target Lo Tolerance (use in Tol mode)	21
3.4.8	Check Weigh Target Hi Tolerance (use in Tol mode).....	21
3.4.9	Count Piece Weight Value.....	22
3.4.10	Count Target Value.....	23
3.4.11	Recipe Weight Compensation Values	23
3.4.12	Recipe Target Weight Values	24
3.4.13	Select Recipe.....	24
3.4.14	Recipe Active.....	24
3.4.15	Recipe Control	25
3.4.16	Recipe Info.....	25
3.4.17	Alarm Target.....	26
3.4.18	Conversion Factor Value	26
3.4.19	Conversion Factor Units	27
3.4.20	Computer Link	27
3.4.21	Pack Run Target.....	27
3.4.22	Pack Run Minimum Weight	28
3.4.23	User Field Titles.....	28
3.4.24	Query Transaction Log	29
4.	Appendix	31
4.1	Format of PLU data	31
4.2	Option names	32

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*