

E1110 Digital Indicator System



E1110

User Instructions

NORTH AMERICA V2.0



Contents

	<i>page</i>
Contents	5
1 Warnings and safety information.....	9
1.1 Installation and service.....	10
1.2 Electrical installation.....	10
1.3 Routine maintenance	10
1.4 Cleaning the machine	11
1.5 Training	11
1.6 Sharp objects	11
1.7 EMC compliance	11
2 Getting started.....	13
2.1 Description	14
2.2 Displays.....	16
2.3 Keyboard.....	18
3 Basic weighing	21
3.1 Operator mode	22
3.2 General weighing	24
3.3 General tare and net weighing	25
3.4 Weighing errors.....	28
3.5 Totals (Accumulators)	29
3.6 PLUs	31
4 Advanced functions	33
4.1 Selecting the options	34
4.2 STATUS - Indicator status / test.....	36
4.3 CHECK - Checkweighing	38
4.4 PACK - Pack runs	43
4.5 PEAK_H - Peak hold	46
4.6 MOTION - In motion weighing.....	47
5 COUNT - Counting application.....	49
5.1 Introduction	50
5.2 Setting the piece weight	52
5.3 Dribble sampling.....	53
5.4 Bulk sampling	55
5.5 Entering the piece weight.....	57
5.6 Entering a count target.....	58
5.7 Counting	59
5.8 Counting using PLUs	60

6 TRUCK - Truck scale weighing	63
6.1 Introduction	64
6.2 In and out weighing.....	65
6.3 Shortcut steps	67
6.4 Creating truck records.....	68
6.5 Single outbound weighing.....	69
6.6 Weighing long trucks.....	70
6.7 Printing the report	72
7 SUPER - Supervisor mode	73
7.1 Enter and EXIT supervisor mode	74
7.2 PRINT - Print configuration settings.....	75
7.3 ALTER - Configuring the indicator	76
7.4 TARES - Stored tares	77
7.5 PASSWD - Changing passwords.....	80
7.6 CLOCK - Date and time	81
7.7 ACCESS - Password protection	85
7.8 LCD - Display contrast	87
7.9 FIELDS - User fields	88
7.10 CALIB - Calibration report.....	90
7.11 TLOG - Transaction log	91
7.12 RECRDS - Truck records.....	92
7.13 AUDIT - Audit log	93
7.14 INFO - Information line.....	94
7.15 KEYBRD - Enable and disable keys	95
7.16 NETWRK - Network details.....	96
7.17 S_KEY - Remote keyboard emulation	98
7.18 PWR UP - Power up mode	99
7.19 L.UNIT - Lock Units.....	100
8 SUPER PLU MODE.....	101
8.1 Enter and exit SUPER PLU MODE.....	102
8.2 Create and edit PLUs.....	104
8.3 PLU configuration options	105
8.4 PLU PRINT MODE	109
8.5 Delete PLUs.....	110
8.6 PART NUMBER message	110
9 RECIPE programming.....	111
9.1 Introduction	112
9.2 Creating recipes	114
9.3 Other supervisor functions	123
9.4 Typical recipe example	124
9.5 Using the application.....	132

10 Alarms	135
10.1 Introduction	136
10.2 Creating alarms.....	138
10.3 Other functions.....	144
10.4 Typical alarm example	145
10.5 Editing a weight target.....	150
11 Help Messages	151
11.1 Help messages	152
12 General Data	157
12.1 Specifications	158
12.2 ASCII codes	160
Index	161

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : the biggest supplier of cash register and scale manuals on the net