



PC-220 Counting Scale User's Manual

Table of Contents

Introduction	5
Installation	5
Sleep Mode	5
Error Messages	5
PC-220 Front Panel	6
Keypad	6
Display	6
Using the Scale	8
Zeroing the Scale	8
Using the Clear Key	8
Clearing a Numeric Entry	8
Using Tares	8
Keying in a known tare weight	8
Cancelling a tare	9
Sampling Parts for Counting	9
Normal sampling	9
Reverse sampling	10
Resampling	10
Manual resampling	10
Using Piece Weights	10
Keyboard Entry of Piece Weights	10
Viewing Active Piece Weight	10
Clearing the Active Piece Weight	10
Using the High Limit Alarm	11
Setting the high limit	11
View the current high limit	11
Clearing the high limit	11
Using Part Look Up (PLU) Keys	11
Creating a PLU	11
Recalling a PLU Using the PLU key	12
Recalling a PLU Using a PLU ^x hot key	12
Clearing a PLU	12
Clearing a PLU Using a PLU ^x hot key	12
Accumulator Function	13
Accumulating counts	13
Viewing accumulator values	13
Clearing accumulator values	13
Management Mode	14
Beeper Alarm	15
Keyboard Beeper	15
Weight Limit Beeper	15
Error Beeper	15
Changing Beeper Volume	15
Changing Backlight Time	15
Changing Sleep Time	16
Changing Duration of a Long Press	16
Changing Minimum Sample Weight	16
Changing Manual Resampling Range	16
Changing Automatic Resampling Range	16
Changing a PLU Item Weight	17
Changing a PLU Tare	17
Protecting a PLU	17

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Weigh-Tronix/PC-220 user manual.html](https://the-checkout-tech.com/manuals/Weigh-Tronix/PC-220%20user%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)