



# PC-220 Counting Scale User's Manual

# Table of Contents

Introduction .....	5
Installation .....	5
Sleep Mode .....	5
Error Messages .....	5
PC-220 Front Panel .....	6
Keypad .....	6
Display .....	6
Using the Scale .....	8
Zeroing the Scale .....	8
Using the Clear Key .....	8
Clearing a Numeric Entry .....	8
Using Tares .....	8
Keying in a known tare weight .....	8
Cancelling a tare .....	9
Sampling Parts for Counting .....	9
Normal sampling .....	9
Reverse sampling .....	10
Resampling .....	10
Manual resampling .....	10
Using Piece Weights .....	10
Keyboard Entry of Piece Weights .....	10
Viewing Active Piece Weight .....	10
Clearing the Active Piece Weight .....	10
Using the High Limit Alarm .....	11
Setting the high limit .....	11
View the current high limit .....	11
Clearing the high limit .....	11
Using Part Look Up (PLU) Keys .....	11
Creating a PLU .....	11
Recalling a PLU Using the PLU key .....	12
Recalling a PLU Using a PLU <sup>x</sup> hot key .....	12
Clearing a PLU .....	12
Clearing a PLU Using a PLU <sup>x</sup> hot key .....	12
Accumulator Function .....	13
Accumulating counts .....	13
Viewing accumulator values .....	13
Clearing accumulator values .....	13
Management Mode .....	14
Beeper Alarm .....	15
Keyboard Beeper .....	15
Weight Limit Beeper .....	15
Error Beeper .....	15
Changing Beeper Volume .....	15
Changing Backlight Time .....	15
Changing Sleep Time .....	16
Changing Duration of a Long Press .....	16
Changing Minimum Sample Weight .....	16
Changing Manual Resampling Range .....	16
Changing Automatic Resampling Range .....	16
Changing a PLU Item Weight .....	17
Changing a PLU Tare .....	17
Protecting a PLU .....	17

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*