

WEIGH-TRONIX



PC-820/821 Parts Counter User's Manual

Table of Contents

Table of Contents	3
Specifications	4
Introduction	7
Unpacking and Preparing the PC-820	7
PC-820 Description	8
Front Panel Keys	8
Hard Keys	8
Softkeys	9
Weighing Operations	10
Gross Weighing	10
Net Weighing	10
Entering a Known Tare Weight	10
Removing an Active Tare Weight	10
Counting Operations	11
Counting Overview	11
Counting in Bulk Mode	11
Counting in Dribble Mode	12
Counting While Using a Container	12
Entering Numeric Values	12
Reverse Counting	13
Using the Database	13
PC-820 Menus	15
Entering the Menu	15
User Menu (Password is 111)	17
Set Softkey	17
Select Softkey	18
BASIC Softkey	18
Data Menu (Password is 359)	19
DBASE Softkey	19
ACCUM Softkey	19
PRINT Softkey	20
Changing Heat Settings	23
PASS Softkey	23
EXIT Softkey	23
Serial Communication	24
Scale Status Byte Definition	26
Power and Battery Information	27
Power Supply	27
Battery Power	27
Frequently Asked Questions	27

Pages are numbered consecutively beginning with the cover page.

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Weigh-Tronix/PC-820 and PC-821 user manual.h](https://the-checkout-tech.com/manuals/Weigh-Tronix/PC-820%20and%20PC-821%20user%20manual.h)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)