
(11-1-95) CUVV VEVS. WI 120 Rev B Accumulator V, 2,05

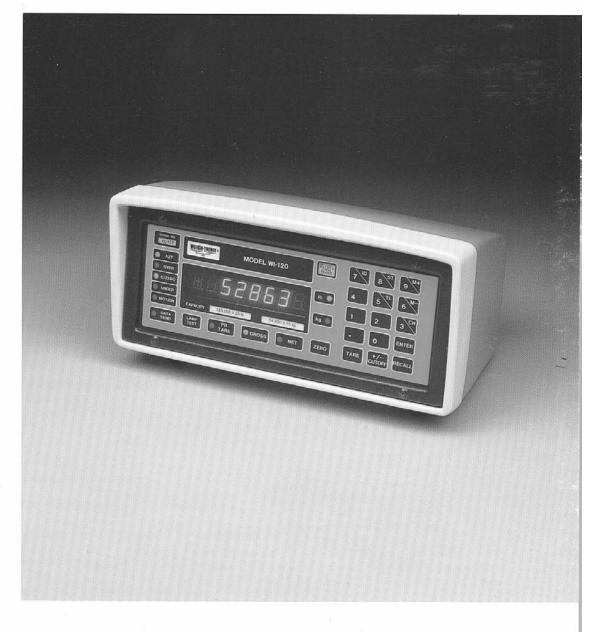

WI-120 Accumulator User's Manual

TABLE OF CONTENTS

PART 1: INTRODUCTION TO THE WI-120 ACCUMULATOR

DEFINITION AND OVERVIEW	1
SPECIFICATIONS	2
ENCLOSURES	
FEATURES	4
FRONT PANEL KEYBOARD FUNCTIONS	5
Keyboard Summary	5
Alphabetical Glossary of Key Functions	5
DISPLAY MESSAGES	8

PART II: OPERATING THE WI-120 ACCUMULATOR

1	NITIAL OPERATING PROCEDURES	(9
	Setting the Operating Voltage	;	9
	Powering-Up and Initializing		
	Accessing Configuration Mode and Viewing the Parameters		
	Applying Security Code		
	Reading and Setting Time/Date		
	Enabling and Entering Identification Number		
v	EIGHING FUNCTIONS		
	Zeroing the Scale		
	Obtaining a Gross Weight Value	18	\$
	Using Pushbutton Tare Function to Store Container Weights	18	1
	Using Keypad Multiple Tare Function to Store Container Weights	19	i
	Entering and Clearing Over/Under Values	23	1
	Entering, Reviewing, and Clearing Cutoff Values	24	-

Continued

A	CCUMULATOR FUNCTIONS	27
	Configuration Parameters for Accumulator Functions	27
	Clearing Accumulator Channels	28
	Accumulating Weight Values and Transmitting to Peripheral Device	29
	Transmitting Scale Weight Only to Peripheral Device	31
	Using Channel Data Display	31
	Transmitting a Subtotals Report of All Channels	32

PART III: CONFIGURING THE WI-120 ACCUMULATOR

PLANNING PERIPHERAL DEVICES FOR TRANSMISSION	OF DATA 35
ENABLING CONFIGURATION MODE	
SELECTING OPTIONS FOR FUNCTION PARAMETERS	
Security Code 39	Automatic Zero Tracking (AZT) 48
Time/Date 41	Motion Window 48
Units of Measure 43	Auto-Accumulate after Motion
Scale Capacity Multiplier 44	U.S.A. or Canadian Compliance 50
Decimal Point Placement 44	Power-Up Display 51
Division Size 45	Identification Number 51
Display Rate 45	Single- or Multiple-Channel Accumulation 52
Digital Motion Stabilizer (DMS) 46	Accumulate-and-Report Method 52
Blank Display During Motion 47	Transaction Counter
Digital or Analog Zero 47	

	Serial Communication Parameters for Printer Port A	54
	Port A: Printer Control Codes Parameter	56
	Page-Formatting Parameters for Printer Port A	63
	Serial Communication Parameters for Computer/Programmable Controller Port B	69
	Formatting Parameters for Computer/Programmable Controller Port B	72
LO	CKING IN SELECTIONS AND DISABLING CONFIGURATION MODE	73

This is a "Table of Contents preview" for quality assurance

The full manual can be found at http://the-checkout-tech.com/estore/catalog/

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<u>http://the-checkout-tech.com</u> : the biggest supplier of cash register and scale manuals on the net